



Installation Data Sheet - Screw Blower

Series: EBS.2

Document Number: TI.BIDS-016

Version: 1.3

Revision Date: 04/24/2023

Package Model	EBS 410 SFC (L & M)		
Electrical Data			
Horsepower	60	75	100
Voltage (3ph/60Hz)	460V	460V	460V
Short Circuit Current Rating (SCCR) [kA] 460V/3ph/60Hz	50	50	50
Package FLA +/- 10%	78	95.3	128.1
Disconnect Fuse [Amp]	90	110	150
Recommended Wire Size (75°C or higher) [AWG]	1 x 4 x 1 / 0	1 x 4 x 2 / 0	1 x 4 x 3 / 0
Motor Data			
Insulation Class	F	F	F
Enclosure Type	TEFC	TEFC	TEFC
Type	SynRM (IES2)	SynRM (IES2)	SynRM (IES2)
Notes:			
1. Time delay (dual element) fuse; Class J ≤ 600A (e.g. AJT).			
2. Fuse and wire sizes determined in accordance to NEC 240.6, 430.52 and tables 250.122, 430.248, 430.250.			
3. Breaker should be suitable for a heavy duty starting load and of inverse time delay design that complies to regulations outlines in NEC 430.52.			
4. SFC Units come standard at 460 volts.			
5. Ground wire size should be equal to conductor size.			
SFC Operating Modes			
<i>External Speed Control</i>			
The speed of the drive motor is controlled via an externally-supplied analog signal within the programmed speed range between n-min and n-max in accordance to machine design.			
<i>Fixed Speed</i>			
The speed of the drive motor is controlled by an adjustable value between 0% and 100% of machine speed which is set at the Sigma Control 2.			
<i>Pressure Regulation</i>			
When machine runs in pressure regulation mode, the frequency converter compensates for deviations between the set point pressure and the actual pressure by changing the speed of the drive motor. The variation in speed determines the air delivery of the machine to match the air consumption of system while maintaining the system pressure so long as the unit is maintained within the control range of the machine (Vmin and Vmax).			
Oil System Data			
Drive End Capacity [qt.]	1.2		
Gear End Capacity [qt.]	1.5		
Oil Type (Synthetic)	G-680		
Working Pressure			
EBS 410 L SFC pr	Continued working pressures below 2.2 psig are not permitted		
EBS 410 M SFC pr	Continued working pressures below 4.4 psig are not permitted		
Package Connections			
HP	60	75	100
Width [in.]	57 1/2	57 1/2	57 1/2
Depth [in.]	75 1/8	75 1/8	75 1/8
Height [in.]	77 1/2	77 1/2	77 1/2
Floor [sq.ft.]	30	30	30
Weight [lb.]	3188	3221	3355
Connection Size [in.]	6	6	6
Type [inlet (optional) and outlet]	Pipe	Pipe	Pipe



Installation Data Sheet - Screw Blower

Series: EBS.2
 Document Number: TI.BIDS-016
 Version: 1.3
 Revision Date: 04/24/2023

Package Model	EBS 410 SFC (L & M)
----------------------	---------------------

General Information

<p style="text-align: center;"><i>Floating Relay Contacts</i></p> <p>Contacts:</p> <ul style="list-style-type: none"> - X12: 1 and 2 Operation - X12: 3 and 4 Ready for operation - X12: 5 and 6 Group Alarm - X12: 7 and 8 Group Warning 	<p style="text-align: center;"><i>Ambient and Intake Conditions</i></p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 70%;">Permissible ambient temperature [°F]*</td> <td style="text-align: right;">+32 - +113</td> </tr> <tr> <td>Permissible intake temperature [°F]*</td> <td style="text-align: right;">+5 - +113</td> </tr> <tr> <td>Relative humidity [%]</td> <td style="text-align: right;">0 - 80</td> </tr> <tr> <td>Maximum elevation [ft.asl]*</td> <td style="text-align: right;">3280</td> </tr> </table> <p style="text-align: right; font-size: small;">*contact Kaeser about deviations in temperature or altitude</p>	Permissible ambient temperature [°F]*	+32 - +113	Permissible intake temperature [°F]*	+5 - +113	Relative humidity [%]	0 - 80	Maximum elevation [ft.asl]*	3280
Permissible ambient temperature [°F]*	+32 - +113								
Permissible intake temperature [°F]*	+5 - +113								
Relative humidity [%]	0 - 80								
Maximum elevation [ft.asl]*	3280								

<p style="text-align: center;"><i>Remote On/Off</i></p> <p>Contacts (not floating): powered 24 VDC</p> <ul style="list-style-type: none"> -X15: 5 and 6 <p>Function:</p> <ul style="list-style-type: none"> - from open to closed: Machine switches on - from closed to open: Machine switches off 	<p style="text-align: center;"><i>External Alarm</i></p> <p>Contacts (not floating): powered 24 VDC</p> <p>DI: 1.08</p> <p>Function:</p> <ul style="list-style-type: none"> - the machine will switch off in the event of this external fault
---	--

Ventilation of Blower Room


Air Inlet Opening	5.4 sq. ft
Cooling Fan Capacity (forced ventilation)	2,070 CFM
Max Heat Rejection	31,400 BTU/Hr

Ventilation values based on 1427cfm @ 15 psig ΔP, 100Hp and ambient inlet. Max. room temp. = 113° F and cooling air temp = 100° F. Discharge piping length = 5ft.

Model shown for reference only

Actual duct size may vary with installation

- 1 Exhaust Fan
- 2 Ventilation Inlet Air Opening
- X Cross direction
- Y Longitudinal direction

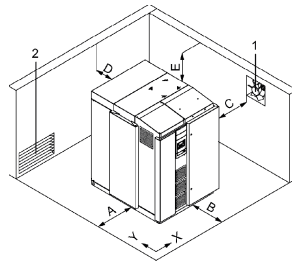


Recommended machine placement and dimensions:

		Inches
A	Left side clearance =	See table
B	Front clearance =	43.3
C	Right side clearance =	See table
D	Back clearance =	39.3
E	Height clearance =	31.5

Foundation in the cross direction (X) must be level, inclination max. 0.8°
 Foundation in the longitudinal direction (Y) must be level, inclination max. 2.0°

*The foundation must be firm and capable of bearing the weight of the machine.

Recommended Installation	A	C
Beside another machine	5.9	5.9
Beside a wall	11.8	11.8

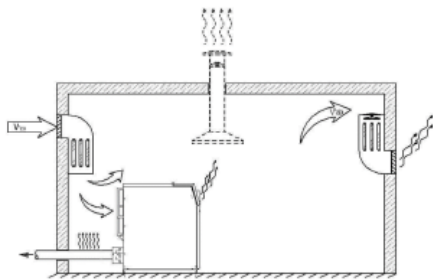

It is recommended to extract the exhaust air from the upper third of the room as this is where the heat collects. The room ventilation openings should be arranged that the current of cooling air flowing through the room passes over the blower inlet and exhaust ports and, if possible, should leave no stagnant air in the room. (A thermal short circuit must be avoided, i.e. discharged cooling air must not find its way to the cooling air inlet.)
 The blower must not be positioned so near to a wall that the inflow of cooling air is obstructed.

Pipework should be insulated against heat emission.

If the blower station is located in the middle of a large hall its exhaust air can be extracted by means of a duct positioned above the exhaust port (illustrated in broken lines).